



# JELIGHT COMPANY, INC.

2 Mason, Irvine, CA 92618

Phone: (949)380-8774 / Fax: (949)768-9457

E-mail: sales@jelight.com

---

## OZONE KILLER MODEL # UVO-254-12

### INSTRUCTION MANUAL

**WARNING:** Potentially fatal voltages exist within this machine. Never remove the lamp while the main power cord is plugged into an electrical outlet. The lamp in this unit emits harmful UV radiation; under no circumstances should the user be exposed to the UV source.

1. To use the OZONE KILLER, attach the unit to the exhaust of your UVO-Cleaner with (four) 8-32 X 1/4 Lg. screws supplied with unit.
2. Slide O-ring over lamp onto the lamp base, against the flange.
3. Install lamp assembly into the OZONE KILLER chamber, secure lamp assembly with retainer ring and hardware.
4. Attach your clean-room exhaust tube to the OZONE KILLER exhaust.
5. Plug lamp connector into power supply.
6. Check all connections for fit, and fix any leakage that may occur.
7. Turn on OZONE KILLER and allow lamp to stabilize for a 3 minute period before operating UVO-CLEANER.

**NOTE: TEST LAMP INTENSITY WITH RADIOMETER AFTER EVERY 500 HOURS OF OPERATION, AND REPLACE IF NEEDED. AVERAGE LAMP LIFE IS 10,000 HOURS.**